




Assembly and Operating Instructions

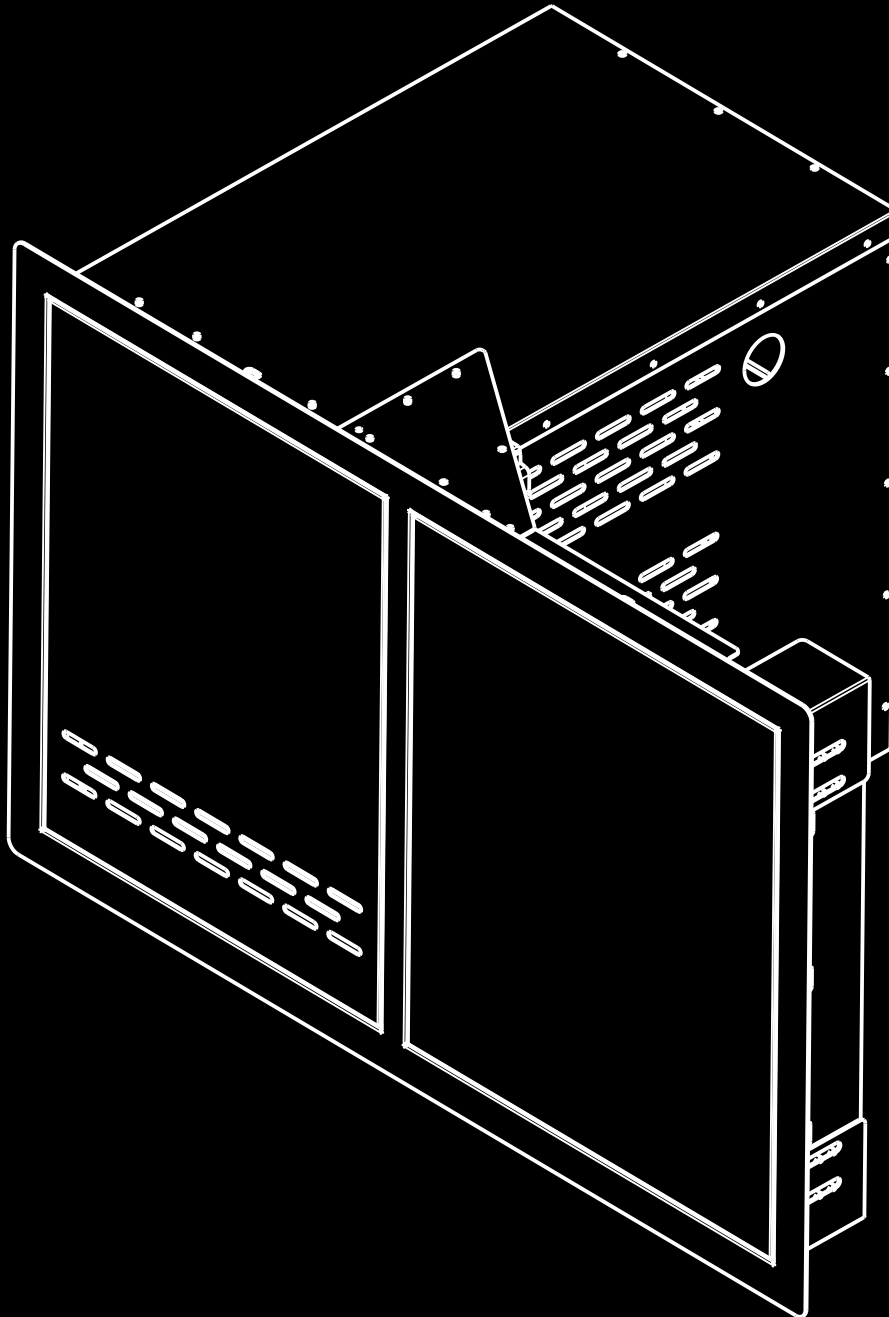

AUSTRALIA / NEW ZEALAND / EUROPE



Important safety instructions2

BOC2040SA product description / dimensions3

BOC2050SA product description / dimensions4

BOC2060SA product description / dimensions5

BOC2070SA product description / dimensions6

BOC2080SA product description / dimensions7

BOC2090SA product description / dimensions8

Notes9

Warranty11

Please read the user manual carefully and store in a handy place for later reference.

The symbols you will see in this booklet have these meanings:

 WARNING

This symbol indicates information concerning your personal safety.

 CAUTION

This symbol indicates information on how to avoid damaging the appliance.

 IMPORTANT

This symbol indicates tips and information about use of the appliance.

 ENVIRONMENT

This symbol indicates tips and information about economical and ecological use of the appliance.

IMPORTANT INFORMATION THAT MAY IMPACT YOUR MANUFACTURER’S WARRANTY


Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the BeefEater manufacturer’s warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the BeefEater manufacturer’s warranty in the event that your product fault is due to failure to adhere this manual.

Record model and serial number here:

Model number:


Serial number:.....

PNC:.....

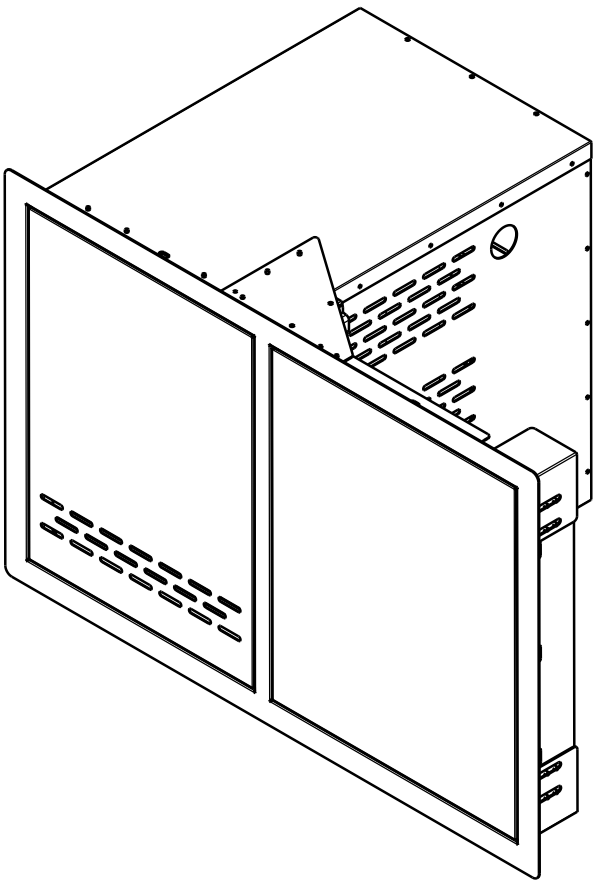


BOC2040SA – Single Door

Dimensions:

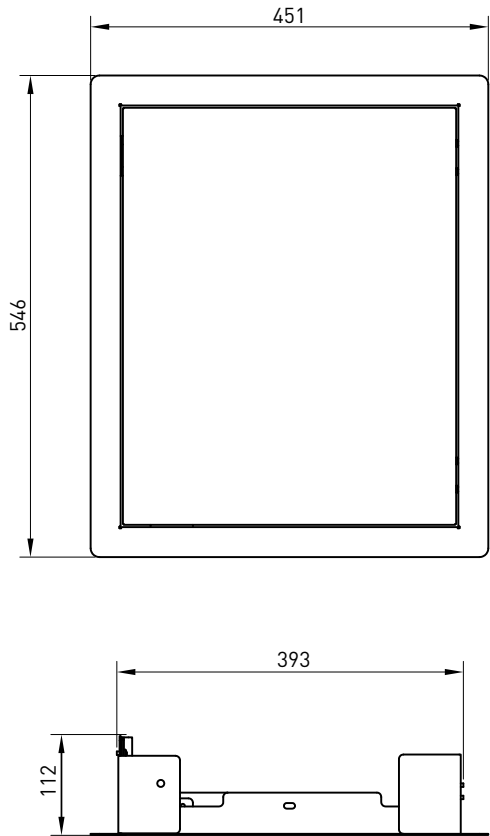



Cut-Out Dimensions:
W 400mm
H 495mm
D 112mm

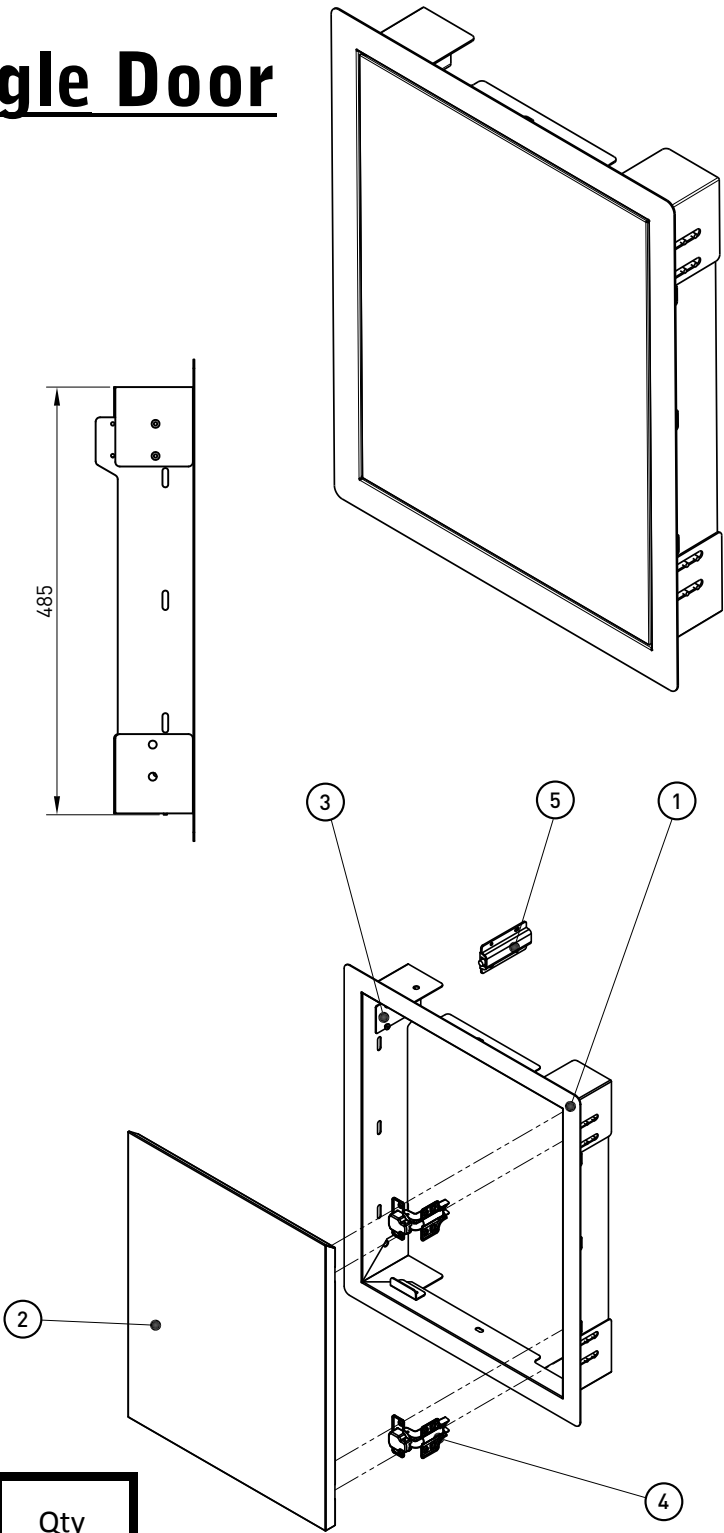


No.	Part Name	Qty
1	Frame	1
2	Door	1
3	Washer	1
4	Hinge	2
5	Rebounder	1

**BOC2050SA – Dual Drawer
and Single Door**

Dimensions:

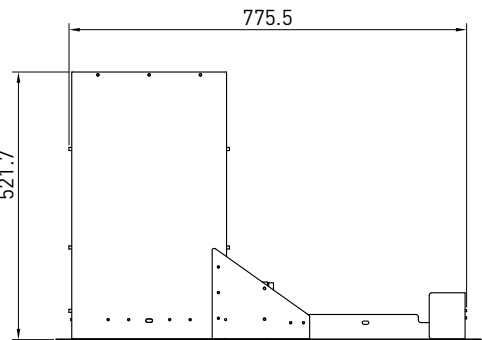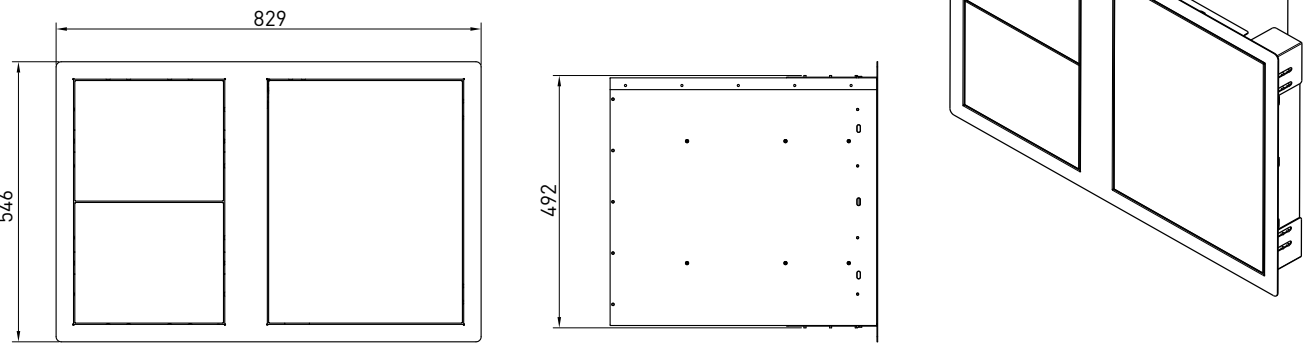



Cut-Out Dimensions:
W 787mm
H 504mm
D 527mm

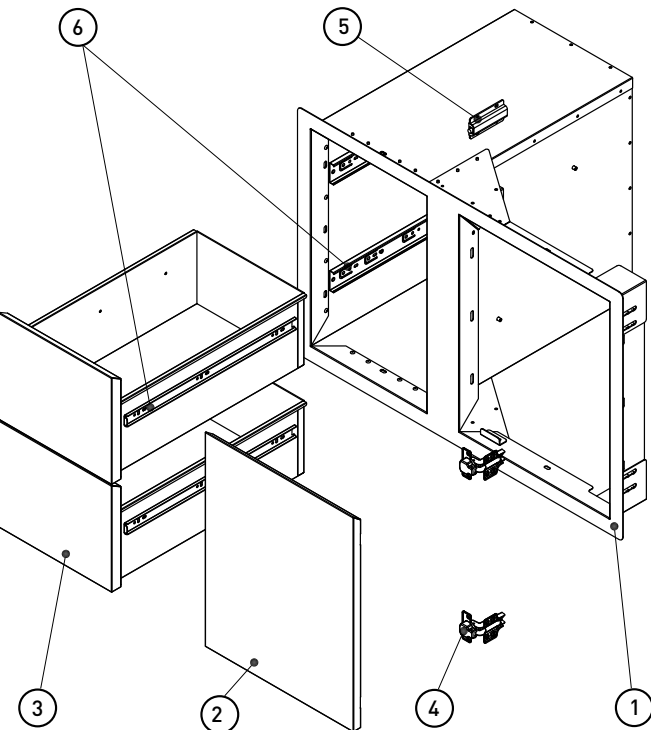


No.	Part Name	Qty
1	Frame	1
2	Door	1
3	Drawer	2
4	Hinge	2
5	Rebounder	2
6	Rail	4

**BOC2060SA – Gas Cylinder/
Bin Drawer and Single Door**

Dimensions:

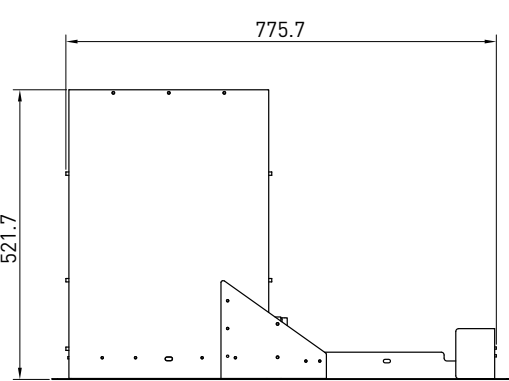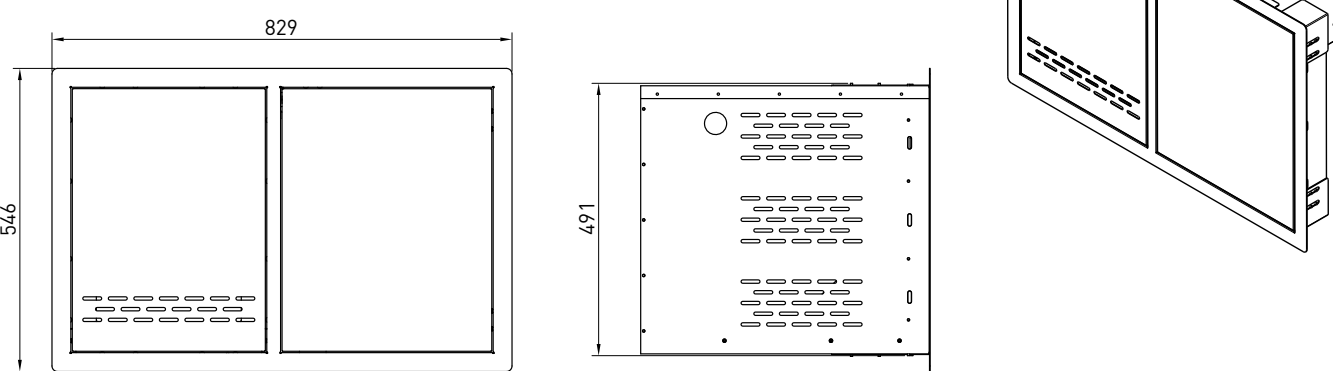


Cut-Out Dimensions:
W 787mm
H 504mm
D 527mm

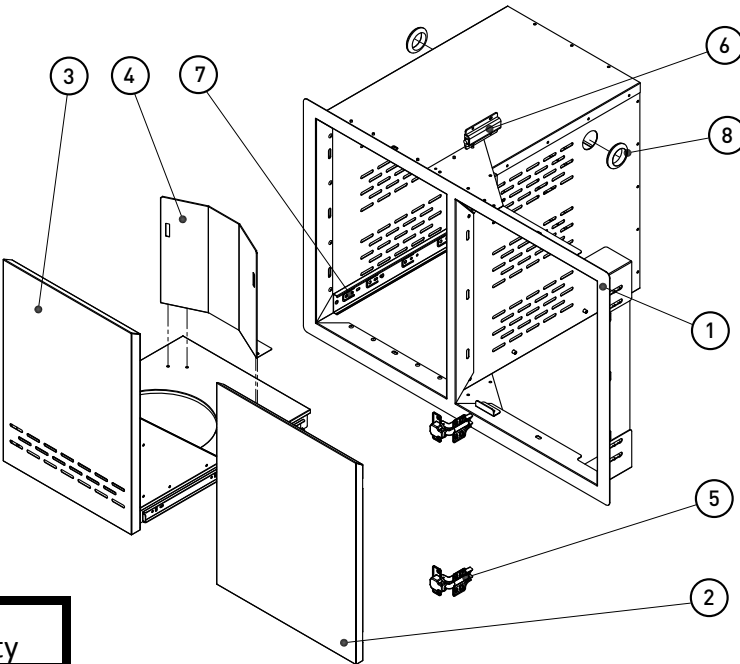

No.	Part Name	Qty
1	Frame	1
2	Door	1
3	Drawer	2
4	Baffle Plate	2
5	Hinge	2
6	Rebounder	1
7	Rail	2
8	Rubber Ring	2


BOC2070SA – Double Door

Dimensions:

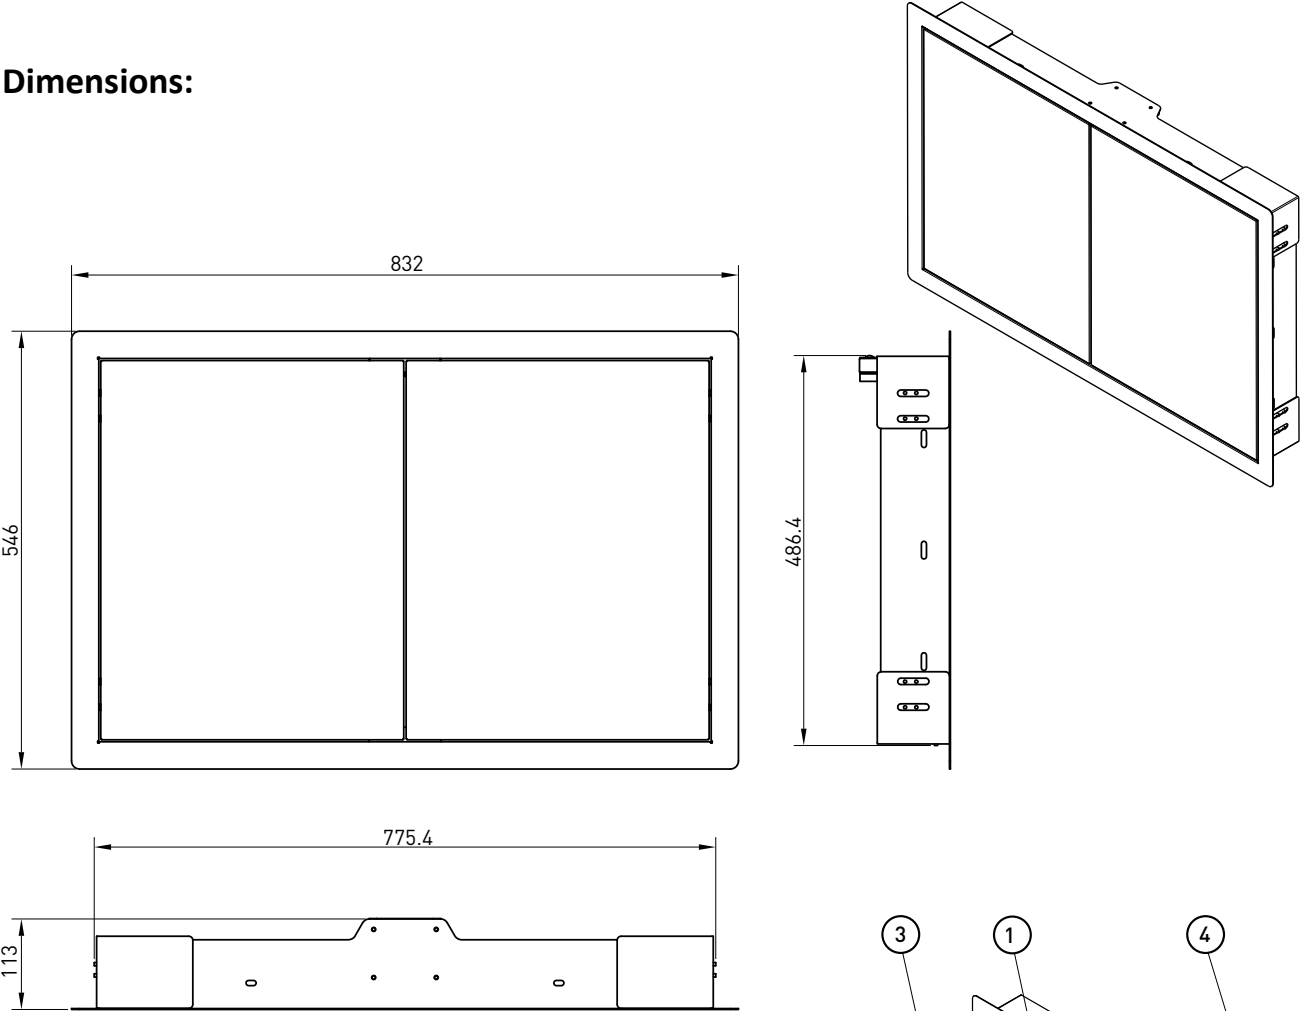


Cut-Out Dimensions:
W 782mm
H 495mm
D 112mm

No.	Part Name	Qty
1	Frame	1
2	Door	2
3	Hinge	4
4	Rebounder	2

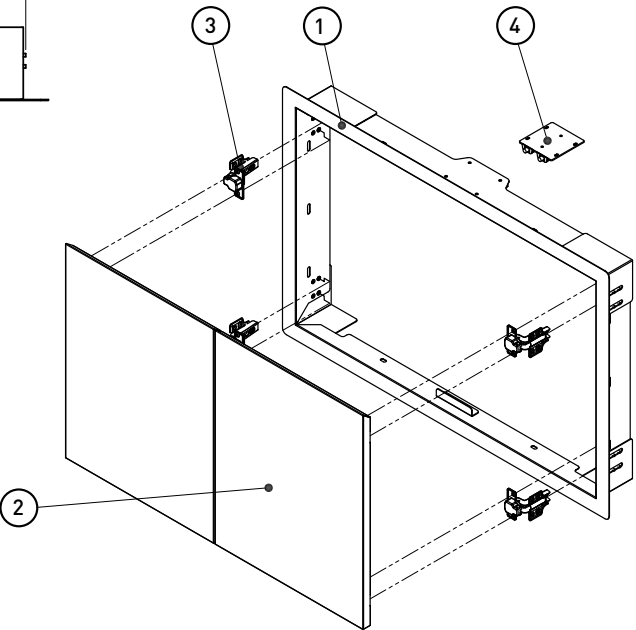


BOC2080SA – Gas Cylinder/
Bin Drawer

Dimensions:

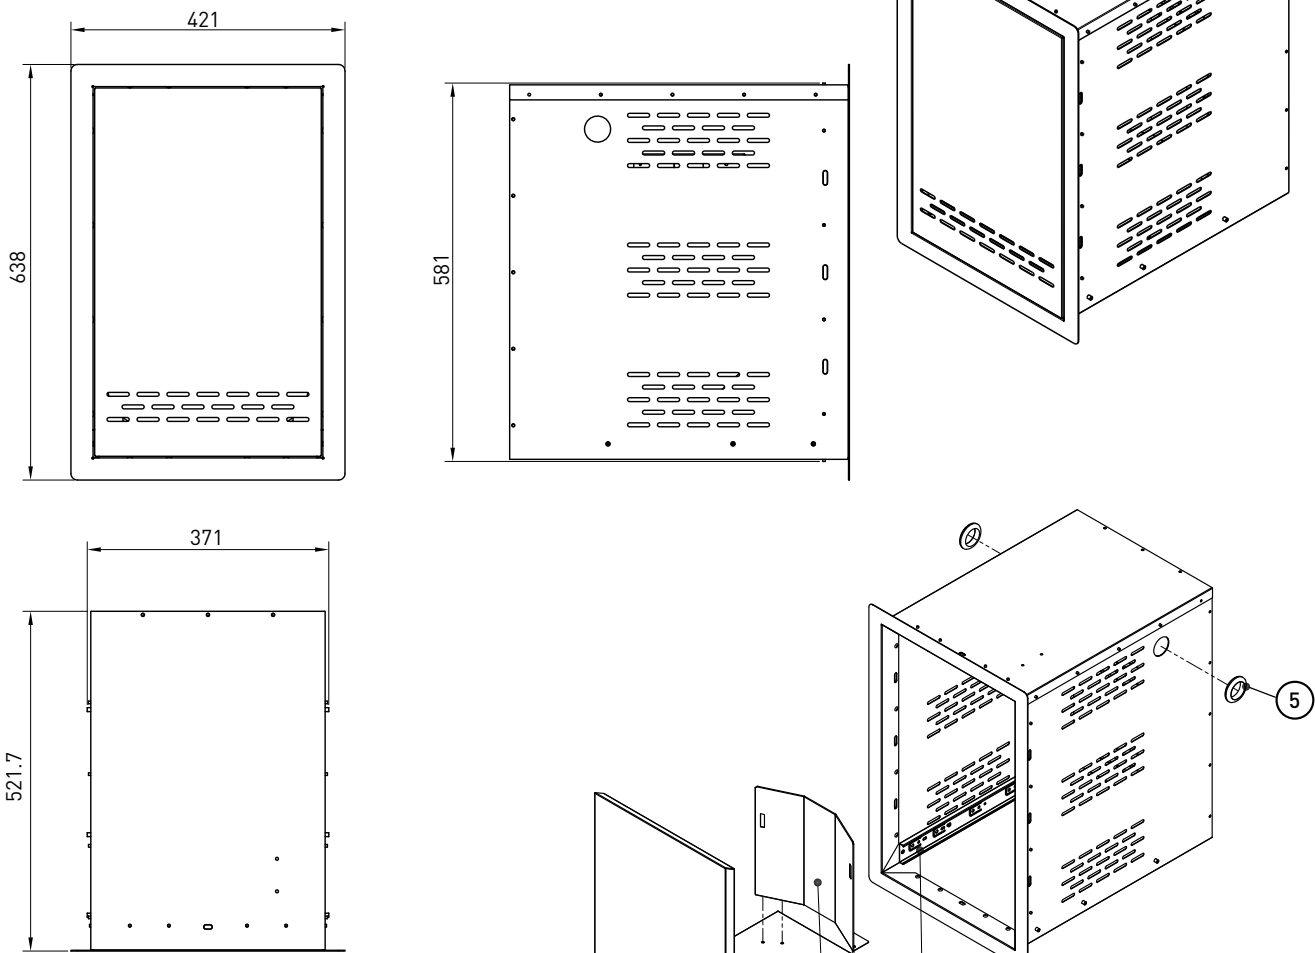


Cut-Out Dimensions:
W 383mm
H 590mm
D 527mm

No.	Part Name	Qty
1	Frame	1
2	Drawer	1
3	Baffle Plate	2
4	Rail	2
5	Rubber Ring	2

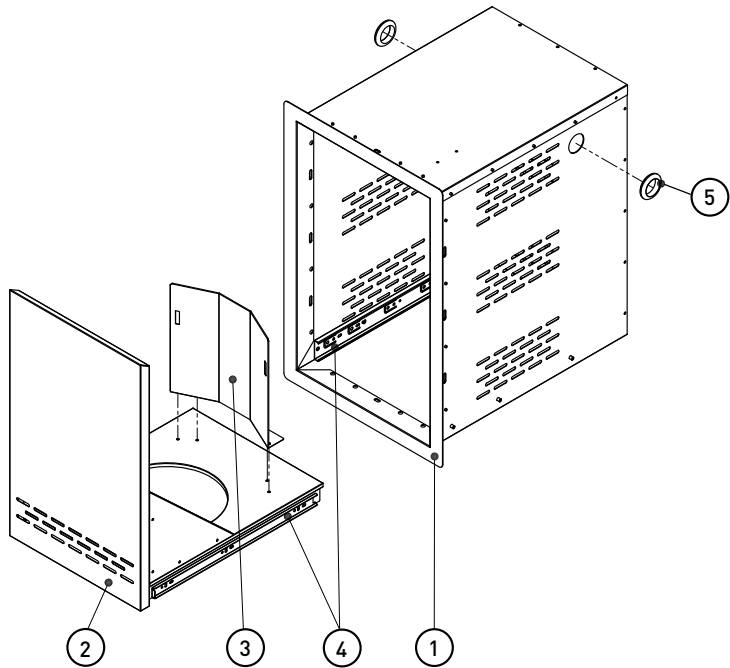

BOC2090SA – Double Drawer

Dimensions:

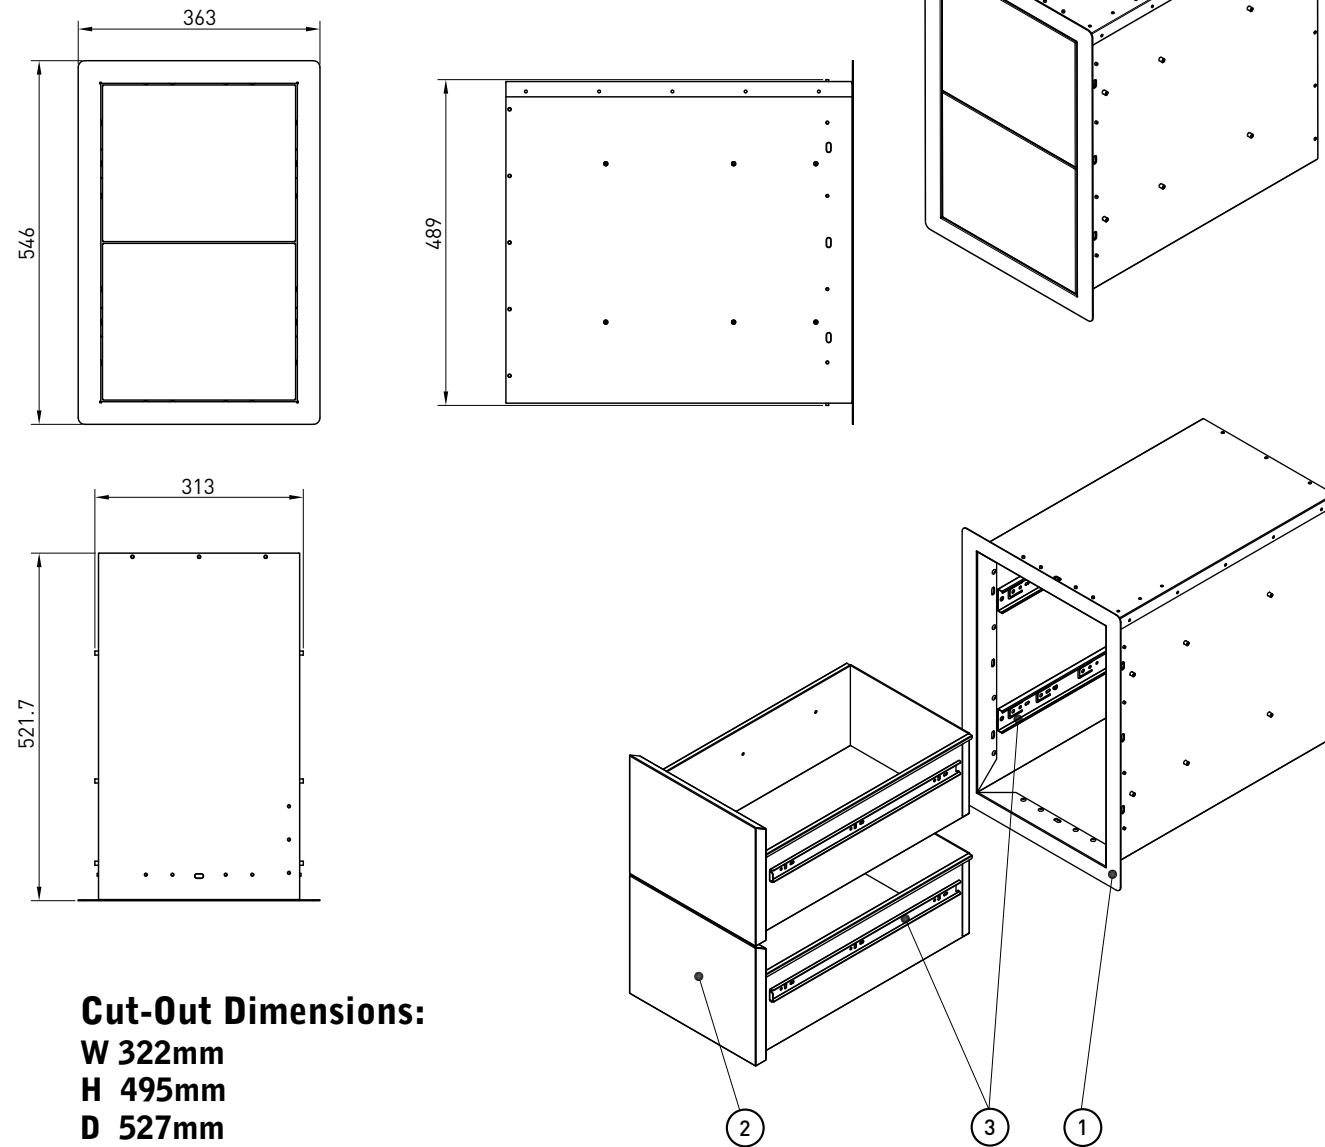

No.	Part Name	Qty
1	Frame	1
2	Drawer	2
3	Rail	4

[illegible]



Electrolux Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND

This document sets out the terms and conditions of the product warranties for BeefEater Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should there be a manufacturing defect in your Appliance. This warranty is in addition to other rights you may have under the Australian Consumer Law.

1. **In this warranty:**
- (a) 'ACL' or 'Australian Consumer Law' means Schedule 2 to the Competition and Consumer Act 2010;

(b) 'Appliance' means any Electrolux product purchased by you and accompanied by this document;

(c) 'ASC' means Electrolux's authorised serviced centres;

(d) 'BeefEater' is the brand controlled by Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively "Electrolux") of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;

(e) 'Warranty Period' means the period specified in clause 3 of this warranty;

(f) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
2. **Application:** This warranty only applies to new Appliances, purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Appliances or services relate, including any non-excludable statutory guarantees in Australia and New Zealand.
3. **Warranty Period:** Subject to these terms and conditions, this warranty continues for in Australia for a period of 24 months and in New Zealand for a period of 24 months, following the date of original purchase of the Appliance. Specific components are warranted against manufacturing defects in Australia and New Zealand for the periods listed below;
- Stainless Steel Box – Further 23 years parts only

• Enamel burner box – Further 8 years parts only

• Stainless steel plates, grills and burners – Further 3 years parts only

• Cast iron plates, grills and burners – Further 1 year parts only
4. **Repair or replace warranty:** During the Warranty Period, Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux may, in its absolute discretion, choose whether the remedy offered for a valid warranty claim is repair or replacement. Electrolux or its ASC may use refurbished parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux.
5. **Travel and transportation costs:** Subject to clause 7, Electrolux will bear the reasonable cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. Travel and transportation will be arranged by Electrolux as part of any valid warranty claim.
6. **Proof of purchase** is required before you can make a claim under this warranty.
7. **Exclusions:** You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:
- (a) light globes, batteries, filters or similar perishable parts;

- (b) parts and Appliances not supplied by Electrolux;

(c) cosmetic damage which does not affect the operation of the Appliance;

(d) damage to the Appliance caused by:

(i) negligence or accident;

(ii) misuse or abuse, including failure to properly maintain or service;

(iii) improper, negligent or faulty servicing or repair works done by anyone other than an Electrolux authorised repairer or ASC;

(iv) normal wear and tear;

(v) power surges, electrical storm damage or incorrect power supply;

(vi) incomplete or improper installation;

(vii) incorrect, improper or inappropriate operation;

(viii) insect or vermin infestation;

(ix) failure to comply with any additional instructions supplied with the Appliance;

In addition, Electrolux is not liable under this warranty if:

- (a) the Appliance has been, or Electrolux reasonably believes that the Appliance has been, used for purposes other than those for which the Appliance was intended, including where the Appliance has been used for any non-domestic purpose;

(b) the Appliance is modified without authority from Electrolux in writing;

(c) the Appliance's serial number or warranty seal has been removed or defaced.

8. How to claim under this warranty: To enquire about claiming under this warranty, please follow these steps:

- (a) carefully check the operating instructions, user manual and the terms of this warranty;

(b) have the model and serial number of the Appliance available;

(c) have the proof of purchase (e.g. an invoice) available;

(d) telephone the numbers shown below.

9. Australia: For Appliances and services provided by Electrolux in Australia: Electrolux goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the ACL.

10. New Zealand: For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.

11. Confidentiality: You accept that if you make a warranty claim, Electrolux and its agents including ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Electrolux Warranty

FOR SALES IN UK & EUROPE

This document sets out the terms and conditions of the product warranties for BeefEater Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should there be a manufacturing defect in your Appliance. This warranty is in addition to other rights you may have under UK & European Consumer Law.

1. **In this warranty:**
- (a) 'Appliance' means the product purchased by you and accompanied by this document;

(b) 'BeefEater' is the brand distributed in UK & Europe by M Richards Ltd, PO Box 1238, Cheddar. BS27 9AH, UK

(c) 'Warranty Period' means the period specified in clause 3 of this warranty;

(d) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.

2. Application: This warranty only applies to new Appliances, purchased and used in UK & Europe and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Appliances or services relate, including any non excludable statutory guarantees in UK & Europe.

3. Warranty Period: Subject to these terms and conditions, this warranty continues for in UK & Europe for a period of 24 months, following the date of original purchase of the Appliance. Specific components are warranted against manufacturing defects in UK & Europe for the periods listed below;

• Burner Box - Further 3 years.

4. Repair or replace warranty: During the Warranty Period, M Richards Ltd or its appointed local distributor, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. M Richards Ltd or its appointed local distributor may, in its absolute discretion, choose whether the remedy offered for a valid warranty claim is repair or replacement. M Richards Ltd or its appointed local distributor may use refurbished parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of M Richards Ltd or its appointed local distributor.

5. Travel and transportation costs: Subject to clause 7, M Richards Ltd or its appointed local distributor will bear the reasonable cost of transportation, travel and delivery of the Appliance to and from M Richards Ltd or its appointed local distributor. Travel and transportation will be arranged by M Richards Ltd or its appointed local distributor as part of any valid warranty claim.

6. Proof of purchase is required before you can make a claim under this warranty.

7. Exclusions: You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:

- (a) light globes, batteries, filters or similar perishable parts;

(b) parts and Appliances not supplied by M Richards Ltd or its appointed local distributor;

(c) cosmetic damage which does not affect the operation of the Appliance;

(d) damage to the Appliance caused by:

(i) negligence or accident;

(ii) misuse or abuse, including failure to properly maintain or service;

(iii) improper, negligent or faulty servicing or repair works done by anyone other than an M Richards Ltd or its appointed local distributor authorised repairer;

(iv) normal wear and tear;

(v) power surges, electrical storm damage or incorrect power supply;

(vi) incomplete or improper installation;

(vii) incorrect, improper or inappropriate operation;

(viii) insect or vermin infestation;

(ix) failure to comply with any additional instructions supplied with the Appliance;

In addition, M Richards Ltd or its appointed local distributor is not liable under this warranty if:

- (a) the Appliance has been, or M Richards Ltd or its appointed local distributor reasonably believes that the Appliance has been, used for purposes other than those for which the Appliance was intended, including where the Appliance has been used for any non-domestic purpose;

(b) the Appliance is modified without authority from M Richards Ltd or its appointed local distributor in writing;

(c) the Appliance's serial number or warranty seal has been removed or defaced.

8. How to claim under this warranty: To enquire about claiming under this warranty, please follow these steps:

- (a) carefully check the operating instructions, user manual and the terms of this warranty;

(b) have the model and serial number of the Appliance available;

(c) have the proof of purchase (e.g. an invoice) available;

(d) telephone the numbers shown below.

Important Notice

Before calling for service, please ensure that the steps listed in clause 8 above have been followed.

FOR SERVICE or to find the address of your nearest authorised service centre in Australia PLEASE CALL 1300 307 939 For the cost of a local call (Australia only)	AUSTRALIA ELECTROLUX HOME PRODUCTS 163 O'Riordan Street, Mascot NSW 2020 beefeaterbbq.com.au	FOR SPARE PARTS or to find the address of your nearest spare parts centre in Australia PLEASE 13 13 50 For the cost of a local call (Australia only)
FOR SERVICE or to find the address of your nearest authorised service centre in New Zealand PLEASE CALL 0800 10 66 10 (New Zealand only)	NEW ZEALAND ELECTROLUX (NZ) Limited 3-5 Niall Burgess Road, Mount Wellington beefeaterbbq.co.nz	FOR SPARE PARTS or to find the address of your nearest spare parts centre in New Zealand PLEASE 0800 10 66 20 (New Zealand only)

BSig_BBQ_Warr_Jun17

Important Notice

Before calling for service, please ensure that the steps listed in clause 8 above have been followed.

UK & EUROPE	FOR SERVICE or to find the address of your nearest authorised service centre in UK & Europe PLEASE CALL +44 (0)1934 743322	FOR SPARE PARTS or to find the address of your nearest spare parts centre in UK & Europe PLEASE CALL +44 (0)1934 743322
------------------------	--	---

BSig_ODK_BBQ_Warr_Apr20

For more information on all Beefeater products, or for dimension and installation information, call into your retailer, phone or email our customer care team or visit our website:

Contact us if you need more help

AUSTRALIA

phone: 1300 307 939

email: customercare@beefeaterbbq.com

web: beefeaterbbq.com

NEW ZEALAND

phone: 0800 436 245

email: customercare@electrolux.co.nz

web: beefeaterbbq.com

EUROPE

BeefEater Europe

PO Box 1238

Cheddar

BS27 9AH

Tel: +44 (0)1934 743322

Email: sales@beefeater europe.co.uk

web: www.beefeaterbbq europe.co.uk

BeefEater. We are part of the Electrolux Family.
To add a touch of professional inspiration to your home, visit electrolux.co.uk